

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void users authority to operate this device. CAN ICES-3 (B)/NMB-3(B).

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedy available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship.

U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires contact us for details.

Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This product is not intended for daycare or commercial use.



'Let's care for the environment!'

The wheelie bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



0913-0-M

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

Little Tikes Consumer Service
2180 Barlow Road Hudson, Ohio 44236 U.S.A.
1-800-321-0183
Printed in China

Little Tikes, MGA EntertainmentUK Ltd
50 Presley Way
Crownhill
Milton Keynes
MK8 OES
Bucks, UK
+ 0800 521 558

www.littletikes.com
www.littletikes.co.uk



Visit our website at www.littletikes.com to register your product and to enter our sweepstakes. (No purchase necessary)



Light n' Sounds Stacker

Ages 18 months+

Item no.: 636370M, 636387M

ADULT BATTERY INSTALLATION REQUIRED

INTRODUCTION

Pile the rings up high, listen to the fun sounds and watch the lights flicker before your eyes.

CONTENTS

- 1 Little Tikes® Light n' Sounds Stacker with 3 detachable rings and 1 detachable sphere



Illustrations may vary from actual contents.

BEFORE YOU BEGIN

The batteries included in your Stacker are for in-store demonstration. It is recommended that prior to playing, an adult install fresh alkaline batteries for best performance:

1. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from the back of the Stacker. (Fig.1)
2. Install two (2) 1.5V AA alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment. (Fig. 1)
3. Replace the compartment cover and tighten the screw.

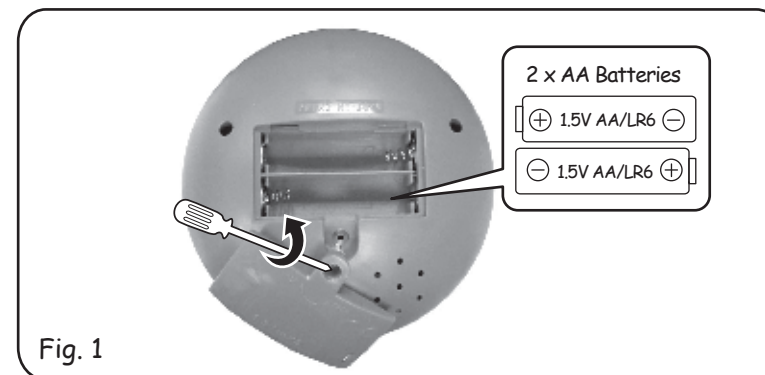


Fig. 1

QUICK START

Here are some of the fun features of the Light n' Sounds Stacker:

Turn it on. (Fig. 2)



Fig. 2

On / Off

It's a stacker! (Fig. 3)



Fig. 3

The sphere is a rattle! (Fig. 4)



Fig. 4



Fig. 5

• **Mode 1:** Press the top of the stacker for lights and sounds. Press down again and it will also play a song. (Fig. 5)

• Press down on the sphere once more to change the song. Press down twice more to stop the songs from playing.

• **Mode 2:** Press the top of the stacker for lights, sounds, and a song. Press down again to change the song. Press down twice more to stop the songs from playing. (Fig. 5)

• The Little Tikes® Light n' Sounds Stacker plays three different songs!

BATTERY SAFETY INFORMATION

- Charging of rechargeable batteries should only be done under adult supervision Use only size "AA" (LR6) alkaline batteries (2 required).
- Never mix old batteries with new batteries, rechargeable (nickel-cadmium) or carbon zinc with alkaline batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the product before recharging.
- Charging of rechargeable batteries should only be done under adult supervision with batteries removed from product.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.