

BATTERY SAFETY INFORMATION

- Use only size “AA” (LR6) and size “AAA” (LR03) alkaline batteries (6 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer’s instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly: do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.
- Frequency band range is 2423Mhz - 2463Mhz.
- Maximum radio-frequency power: 6dBm.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different than that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void user’s authority to operate this device.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada’s licence-exempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-3 (B)/NMB-3(B).

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year* from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers.

U.S.A. and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details.

Outside U.S.A. and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.



‘Let’s care for the environment!’

The wheelee bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.

Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



Printed in China
0819-0-E/INT

© The Little Tikes Company, an MGA Entertainment company. LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

© 2019 Moonbug Entertainment Ltd. Little Baby Bum™ is a trademark of Moonbug Entertainment Ltd. and used under license. All Rights Reserved.



www.littletikes.com
www.littletikes.co.uk

Little Tikes Consumer Service
2180 Barlow Road, Hudson,
Ohio 44236 U.S.A.
1-800-321-0183

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton
Keynes, MK8 0ES, Bucks, UK
0800 521 558

MGA Entertainment (Netherlands) B.V.
Klipperak 201, 2411 ND Bodegraven, NL
Tel: +31 (0) 172-758 038
E-mail: klantenservice@mgae.com

**Imported by MGA Entertainment
Australia Pty Ltd**
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676



little tikes

 
Sing-Along Piano

AGES 2+ YEARS
ADULT BATTERY INSTALLATION REQUIRED
ADULT ASSEMBLY AND SUPERVISION REQUIRED

SKU: 652707

CONTENTS

- A. Keyboard
- B. Chair
- C. Legs
- D. Support Bar
- E. Sticker Sheet

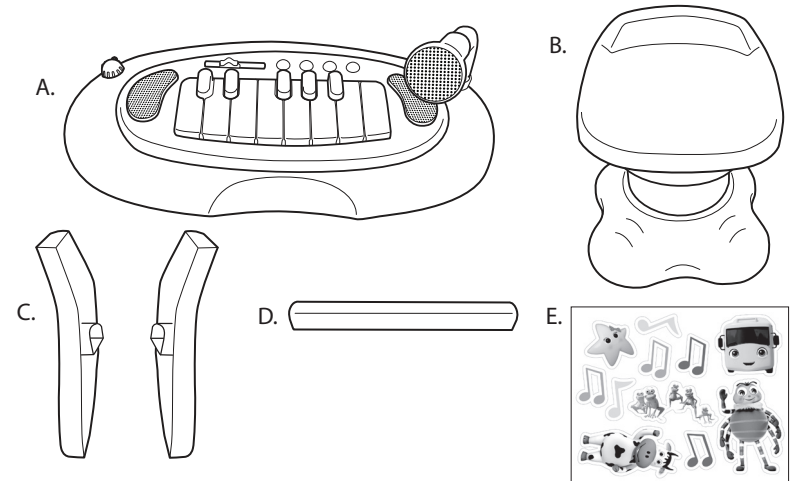

Illustrations are for reference only. Styles may vary from actual contents.

 
⚠ WARNING:

- Keep instructions for future reference.
- Adult assembly required.
- Keep away from children until assembled.
- Adult supervision is required. Do not leave young children unattended.
- Do not allow children to sit, stand, play or climb on top of the piano. Failure to do so may cause the product to become unstable.
- Place on flat, level surfaces free of objects that could cause the table to tip over. Also, place out of the way of household traffic.
- Never use near staircase, steps, pools, hot surfaces, or areas that may be hazardous to a child.
- Do not use if damaged or broken.
- This product is intended for use by children ages 2 years and up.
- Maximum weight limit: 110 lbs (50 Kg)

BATTERY INSTALLATION


Before beginning, an adult must install fresh alkaline batteries. Here's how:

1. Using a Phillips screwdriver (not included), remove the screws and battery compartment covers on the back of the keyboard and the chair.
2. Install four (4) fresh 1.5V AA (LR6) and (2) fresh 1.5V AAA (LR03) alkaline batteries (not included) in the keyboard and chair. Make sure the (+) and (-) ends face the proper direction as indicated inside the battery compartments.
3. Replace the compartment covers and tighten the screws.

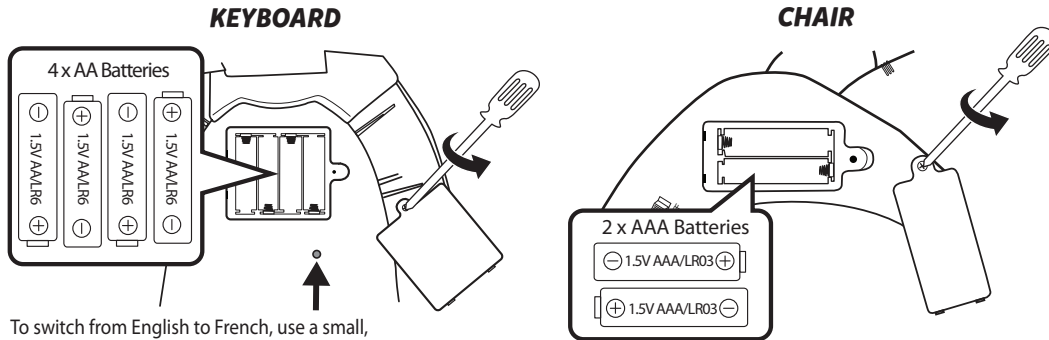


To switch from English to French, use a small, pointed object (like a pin) to press the button on the battery compartment for 2 seconds.

 
ASSEMBLY

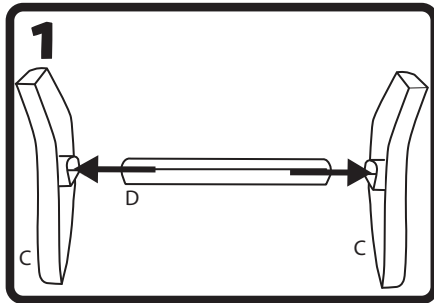

 Attach the support bar (D) to the legs (C).

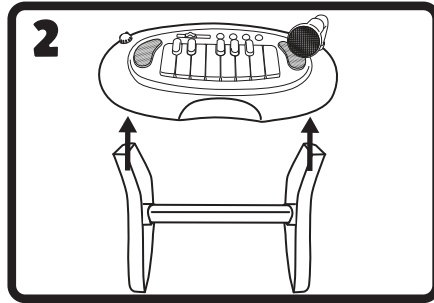

 Attach the legs to the bottom of the keyboard.

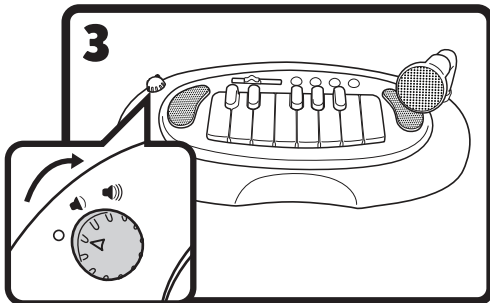


Turn "ON" the keyboard by turning the switch from OFF to low or high volume.

Turn to the:

O = OFF


🔊 = LOW VOLUME

 🔊 = HIGH VOLUME

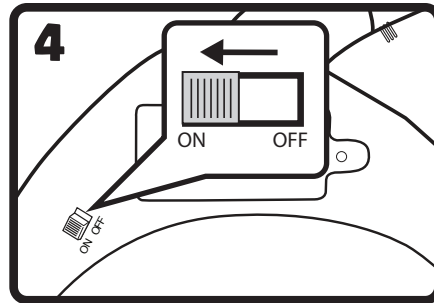

Turn the chair "ON" by moving the switch from the OFF position to the ON position.

 YOUR KEYBOARD

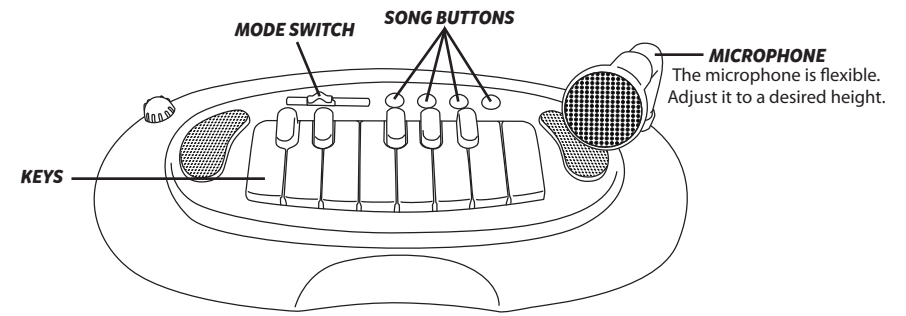

SONGS

Press a button to hear a song.



The Wheels on the Bus



5 Little Speckled Frogs



Bingo



Old MacDonald

MODE SWITCH

Slide the switch to choose between four different ways to play.



KEYS: Press the keys to play notes.

SONGS: Choose a song and it will begin playing. As soon as it stops, press the keys to finish the song.



SONGS: Choose a song. Sing into the microphone to sing along.

KEYS: Press the keys to play sounds.



SONGS: Choose a song to hear the full song.

KEYS: Press the keys to play sounds over the song.



SONGS: Choose a song.

KEYS: Press the keys to play the tune of that song in sounds.

YOUR CHAIR

Sit comfortably on the chair and move to change the speed of the song or to play sounds.

🐢 Swivel to the right to slow down the music.

🐰 Swivel to the left to speed up the music.

🥁 Bounce up and down to play sounds.
NOTE: DO NOT bounce too high. A small bounce is required to activate the sounds.

IMPORTANT INFORMATION

- Turn the product off after playing to conserve battery power.
- The keyboard and chair will go into sleep mode if it has been inactive for a long period of time. Press any key or move the chair to turn it back on.
- If the unit stops working or doesn't work as it should, remove the batteries for a few minutes and then re-insert them. If there is still a problem, install new batteries.
- Prolonged exposure to UV rays, rain and the elements may damage the unit. Store indoors when not in use.
- Clean the product with a slightly damp cloth if necessary. Keep moisture away from the battery compartment.
- Avoid bending the microphone too much.
- Only apply stickers to the included unit, as adhesive may not be completely removed from all surfaces.