

## CONTENTS

- 1 Rescue Tales™ Cuddly Pup: Beagle **OR** Yorkie **OR** Frenchie
- Name Tag Label
- Adoption Certificate
- 1 Microwaveable Pouch



Slightly wet a cloth (not included) and wipe away the tear on your pup's eye.

\* Beagle shown for demonstration.

## NAME YOUR PET & SIGN THE ADOPTION CERTIFICATE



Write your dog's name on the label and stick the label to the dog's tag on the collar.

Sign your pet's adoption certificate.




## IMPORTANT NOTES BEFORE BEGINNING:

- Remove and discard all packaging materials before use.
- Heating up the pouch must be done by an adult only.
- Always wear heat insulating gloves when removing the pouch from the microwave, as the pouch will be hot.
- When heating up the pouch, never exceed 60 seconds.
- Do not use if the pouch is torn or damaged. Discard pouch if it is damaged.

## POUCH INSTRUCTIONS

1. Open the pocket on the back of the pup and remove the pouch.
2. Place the pouch in a clean microwave and heat for 30 seconds. For a warmer pouch, add 10 seconds at a time until the desired warmth is achieved. **DO NOT EXCEED 60 SECONDS.**
3. Remove the pouch from the microwave and immediately replace in the pup. Then, securely fasten the pocket. NEVER PLACE THE POUCH DIRECTLY ON THE SKIN.

**⚠ CAUTION:** Contents are HOT!

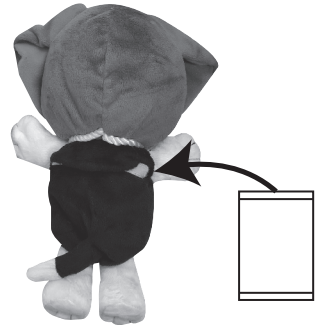

## ⚠ WARNING

- Keep these instructions for future reference.
- Adult supervision is required when children are using the pup.
- Heating the pouch should only be done by an adult. Always use heat insulating gloves when removing the pouch from the microwave.
- Never place the warm pouch directly on the skin. Only use the pouch inside the pup.
- Only use a microwave when warming up the pouch. Do not use other home appliances.
- Heat with caution and do not overheat the pouch. Do not exceed 60 seconds.
- All microwaves are not the same wattage. Temperature may vary depending on the microwave's wattage. To avoid overheating, begin with 30 seconds and add 10 seconds at a time to achieve the desired warmth.
- Allow the pouch to cool down to room temperature before reheating.
- The pouch is NOT washable. Do not submerge the pouch in water or machine wash.
- Discard the pouch if it is torn or damaged.

## IMPORTANT INFORMATION

- Illustrations are for reference only. Styles may vary from actual contents.
- Remove the pouch before washing the pup. Allow the pup to dry thoroughly before replacing the pouch.
- Do not apply the name tag label to other surfaces, as it may not be completely removed.

Please keep this manual as it contains important information.



**Little Tikes Consumer Service**  
2180 Barlow Road Hudson, Ohio 44236  
U.S.A.  
1-800-321-0183

**MGA Entertainment UK Ltd.**  
50 Presley Way, Crownhill, Milton  
Keynes, MK8 0ES, Bucks, UK  
0800 521 558

**MGA Entertainment (Netherlands) B.V.**  
Baronie 68-70, 2404XG  
Alphen a/d Rijn, The Netherlands  
Tel: +31 (0) 172 758038  
E-mail: [klantenservice@mgae.com](mailto:klantenservice@mgae.com)

**Imported by MGA Entertainment  
Australia Pty Ltd**  
Suite 2.02, 32 Delhi Road  
Macquarie Park NSW 2113  
1300 059 676



[www.littletikes.com](http://www.littletikes.com)  
[www.littletikes.co.uk](http://www.littletikes.co.uk)  
[www.littletikes.com.au](http://www.littletikes.com.au)