

BATTERY SAFETY INFORMATION

- Use only size "AG13" (LR44) alkaline batteries (6 required).
- Charging of rechargeable batteries should only be done under adult supervision.
- Remove rechargeable batteries from the product before recharging.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Be sure to insert the batteries correctly and follow the toy and battery manufacturer's instruction.
- Always remove exhausted or dead batteries from the product.
- Dispose of dead batteries properly; do not burn or bury them.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short-circuiting battery terminals.
- Remove batteries before placing the unit into storage for a prolonged period of time.

⚠ WARNING:

This product contains a Button or Coin Cell Battery. A swallowed Button or Coin Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

IMPORTANT NOTES ABOUT BUTTON BATTERIES

- WARNING - KEEP BATTERIES OUT OF REACH OF CHILDREN

- Swallowing may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the esophagus.
- If you suspect your child has swallowed or inserted a button battery immediately call the 24-hour Poisons Information Centre on 13 1126 (Australia)/ your local emergency services for fast, expert advice.
- Examine devices and make sure the battery compartment is correctly secured, e.g. that the screw or other mechanical fastener is tightened. Do not use if compartment is not secure.
- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.
- Adults shall tell potential users about the risk of button batteries and keep their children away from button cell. Adult supervision is required.

WARNING: This toy produces flashes that may trigger epilepsy in sensitized individuals.

FCC COMPLIANCE

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different than that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Modifications not authorized by the manufacturer may void user's authority to operate this device.

CAN ICES-3 (B)/NMB-3(B).

- ♻️ 'Let's care for the environment!'
The wheelee bin symbol indicates that the product must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of the item.
🗑️ Do not treat old batteries as household waste. Take them to a designated recycling facility.

Please keep this manual as it contains important information.



© The Little Tikes Company, an MGA Entertainment company. TOBI™ is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

Printed in China • 1020-0-E/INT

Little Tikes Consumer Service
2180 Barlow Road Hudson, Ohio 44236
U.S.A.
1-800-321-0183

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton
Keynes, MK8 0ES, Bucks, UK
support@LittleTikesStore.co.uk
Tel: +0 800 521 558

MGA Entertainment (Netherlands) B.V.
Baronie 68-70, 2404 XG Alphen a/d Rijn,
The Netherlands
Tel: +31 (0) 172 758038
E-mail: klantenservice@mgaee.com

**Imported by MGA Entertainment
Australia Pty Ltd.**
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676



www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au

TOBI™ Friends

4+

SKUs: 656675 / 656682

ADULT BATTERY INSTALLATION REQUIRED

CONTENTS



CHATTER

656675



BEEPER

656682

EACH SOLD SEPARATELY

 
Illustrations are for reference only. Styles may vary from actual contents.
Please remove all packaging including tags, ties, tacking stitches, and the temporary battery box before giving this product to a child.

BEFORE YOU BEGIN

The temporary battery box connected to your Tobi™ Friend is for in-store demonstration and must be removed before playing to enjoy the full interactive experience. (Fig. 1) After removing the battery box, an adult must follow the instructions below to remove and dispose of the batteries.

Remember: Batteries must not be disposed of with other household waste. Please use designated collection points or recycling facilities when disposing of them.

1. Remove the screw and battery compartment cover from the temporary battery box.
2. Remove the batteries from inside of the temporary battery box and dispose properly. (Fig. 2)
3. Close the compartment cover and discard the temporary battery box.
4. Remove the tab from under your Tobi™ Friend and discard. (Fig. 3)

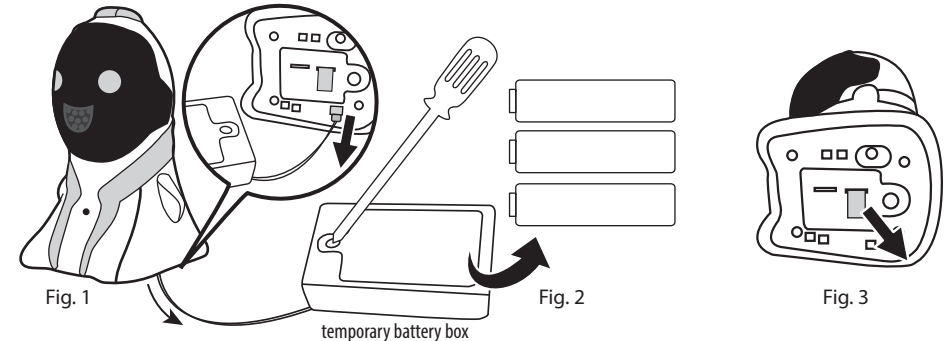


LET'S PLAY

INTERACT WITH YOUR TOBI™ FRIEND

Your Tobii™ Friend will interact back and forth with you in its own language, while lighting up and moving its head.

 1. Ensure the switch under your Tobii™ Friend is in the ON (I) position.
2. Press the button on top of your Tobii™ Friend to start interacting.
3. Speak, play music, clap or make any noise close to the microphone to interact with your Tobii™ Friend.

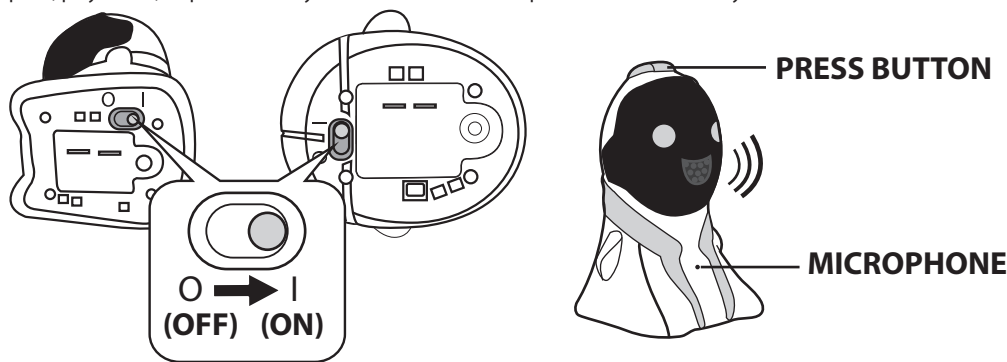


INTERACT WITH OTHER TOBI™ FRIENDS

(EACH SOLD SEPARATELY)

Tobii™ Friends will interact back and forth in their own language, while lighting up and moving their heads.

1. Ensure the switches under Tobii™ Friends are moved to the ON (I) position.
2. Press the button on top of one Tobii™ Friend's head to start the interaction.
3. The Tobii™ Friends will communicate back and forth in their own language telling jokes, arguing, and more!
4. After about 10 interactions, Tobii™ Friends will go to sleep. Wake them up by pressing the buttons on their heads, or turn them off and back on again.

 TIP: Make sure your Tobii™ Friends are in close proximity (about 8 in./20 cm or closer) for optimal interaction.

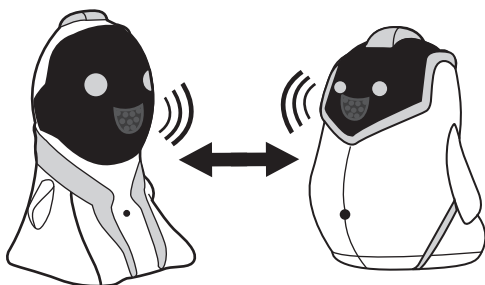

INTERACT WITH TOBI™ ROBOT SMARTWATCH

 
(NOT INCLUDED)

Your Tobii™ Friend will make sound, light up, and move its head when you use your nearby Tobii™ Robot Smartwatch.

Check the Firmware Updater screen in settings on your Tobii™ Robot Smartwatch. Then, check for available firmware updates at www.tobiirobotwatch.com and follow the instructions to download and install.

1. Ensure the switch under your Tobii™ Friend is the ON (I) position and that your Tobii™ Robot Smartwatch is on.
2. Try these functions on your Tobii™ Robot Smartwatch to see how your Tobii™ Friend responds to the sounds.
 - Swipe right or left, tap on Tobii™, feed Tobii™, earn a trophy, or make Tobii™ dizzy, sleepy or bored!
 - Tap on various emojis on your Tobii™ Robot Smartwatch.
 - Snap photos on your Tobii™ Robot Smartwatch.
 - Let an alarm or timer go off.
 - Select a stamp for the calendar.


TIP: Make sure your Tobii™ Robot Smartwatch and Tobii™ Friends are in close proximity (about 4 in./10 cm or closer) for optimal interaction.

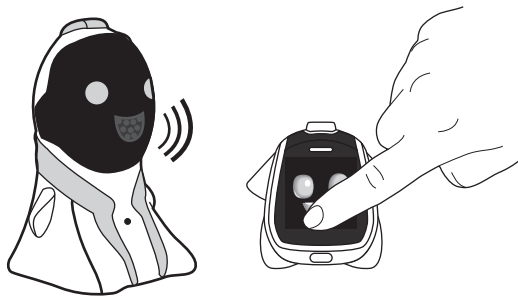

REPLACING THE BATTERIES

An ADULT must replace the batteries should they need replacing. Here's how:

 1. Before replacing the batteries, make sure your Tobii™ Friend is turned OFF (O).
2. Using a Phillips screwdriver (not included) remove the screw and battery compartment cover from under the unit.
3. Install six (6) 1.5V AG13 (LR44) alkaline batteries (not included) making sure the (+) and (-) ends face the proper direction as indicated inside the battery compartment.
4. Replace the compartment cover and tighten the screw.

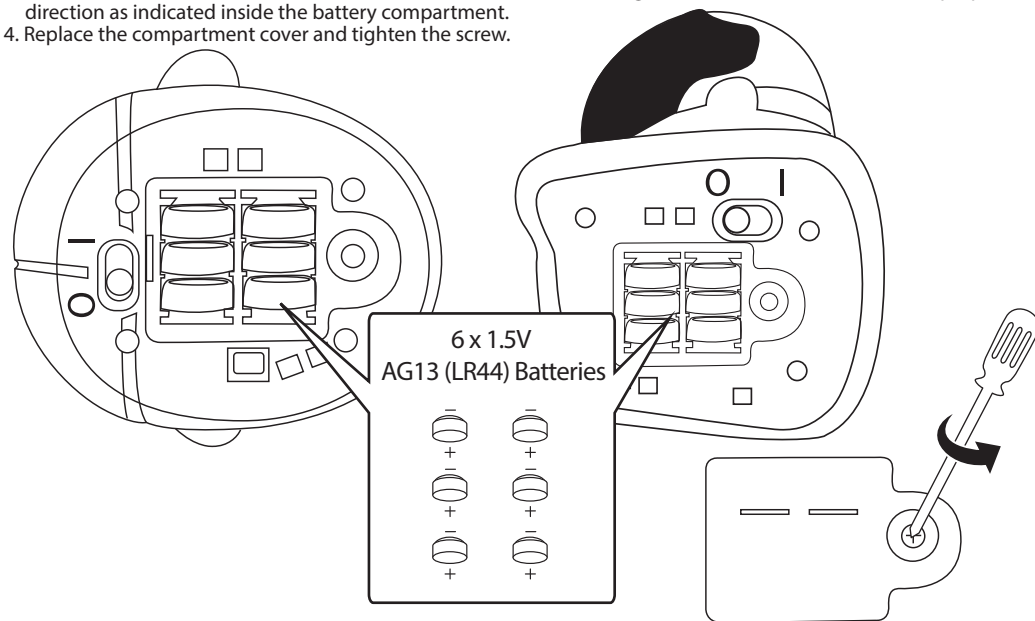

IMPORTANT INFORMATION

- Temporary battery box is not a toy.
- Play is limited in TRY ME mode (temporary battery box still connected). Remove the temporary battery box before playing, and remove the pull tab from the battery compartment under your Tobii™ Friend.
- After approximately two minutes of inactivity, your Tobii™ Friend will enter sleep mode. Wake it up by pressing the button on its head.
- Ensure the switch under your Tobii™ Friend is moved to the OFF (O) position after use to conserve battery power.
- If your Tobii™ Friend is not interacting properly, try turning off (O) and on (I) the unit again.
- Wipe clean with a damp cloth and dry thoroughly.
- Keep moisture away from the battery compartment.
- Do not drop or throw your Tobii™ Friend, as it may irreparably damage the unit.

LIMITED WARRANTY

The Little Tikes Company makes fun, high quality toys. We warrant to the original purchaser that this product is free of defects in materials or workmanship for one year * from the date of purchase (dated sales receipt is required for proof of purchase). At the sole election of The Little Tikes Company, the only remedies available under this warranty will be the replacement of the defective part or replacement of the product. This warranty is valid only if the product has been assembled and maintained per the instructions. This warranty does not cover abuse, accident, cosmetic issues such as fading or scratches from normal wear, or any other cause not arising from defects in material and workmanship. *The warranty period is three (3) months for daycare or commercial purchasers. U.S.A and Canada: For warranty service or replacement part information, please visit our website at www.littletikes.com, call 1-800-321-0183 or write to: Consumer Service, The Little Tikes Company, 2180 Barlow Road, Hudson OH 44236, U.S.A. Some replacement parts may be available for purchase after warranty expires—contact us for details. Outside U.S.A and Canada: Contact place of purchase for warranty service. This warranty gives you specific legal rights, and you may also have other rights, which vary from country/state to country/state. Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.