

CONTENTS

- 1 Rescue Tales™ Cuddly Pup: Beagle **OR** Frenchie **OR** Maltese
- Name Tag Label
- Adoption Certificate
- 1 Microwaveable Pouch



* Beagle shown for demonstration.

NAME YOUR PET & SIGN THE ADOPTION CERTIFICATE



Write your dog's name on the label and stick the label to the dog's tag on the collar.

Sign your pet's adoption certificate.




IMPORTANT NOTES BEFORE BEGINNING:

- Remove and discard all packaging materials before use.
- Heating up the pouch must be done by an adult only.
- Always wear heat insulating gloves when removing the pouch from the microwave, as the pouch will be hot.
- When heating up the pouch, never exceed 60 seconds.
- Do not use if the pouch is torn or damaged. Discard pouch if it is damaged.

POUCH INSTRUCTIONS

1. Open the pocket on the back of the pup and remove the pouch.
2. Place the pouch in a clean microwave and heat for 30 seconds. For a warmer pouch, add 10 seconds at a time until the desired warmth is achieved. **DO NOT EXCEED 60 SECONDS.**
3. Remove the pouch from the microwave and immediately replace in the pup. Then, securely fasten the pocket. NEVER PLACE THE POUCH DIRECTLY ON THE SKIN.

⚠ CAUTION: Contents are HOT!

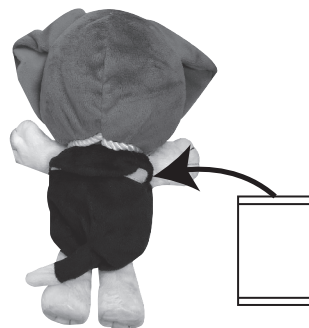

⚠ WARNING

- Keep these instructions for future reference.
- Adult supervision is required when children are using the pup.
- Heating the pouch should only be done by an adult. Always use heat insulating gloves when removing the pouch from the microwave.
- Never place the warm pouch directly on the skin. Only use the pouch inside the pup.
- Only use a microwave when warming up the pouch. Do not use other home appliances.
- Heat with caution and do not overheat the pouch. Do not exceed 60 seconds.
- All microwaves are not the same wattage. Temperature may vary depending on the microwave's wattage. To avoid overheating, begin with 30 seconds and add 10 seconds at a time to achieve the desired warmth.
- Allow the pouch to cool down to room temperature before reheating.
- The pouch is NOT washable. Do not submerge the pouch in water or machine wash.
- Discard the pouch if it is torn or damaged.

IMPORTANT INFORMATION

- Illustrations are for reference only. Styles may vary from actual contents.
- Remove the pouch before washing the pup. Allow the pup to dry thoroughly before replacing the pouch.
- Do not apply the name tag label to other surfaces, as it may not be completely removed.

Please keep this manual as it contains important information.



© The Little Tikes Company, an MGA Entertainment company.
LITTLE TIKES® is a trademark of Little Tikes in the U.S. and other countries. All logos, names, characters, likenesses, images, slogans, and packaging appearance are the property of Little Tikes.

Printed in China • 0720-0-E



www.littletikes.com
www.littletikes.co.uk
www.littletikes.com.au

Little Tikes Consumer Service
2180 Barlow Road
Hudson, Ohio 44236 U.S.A.
1-800-321-0183

MGA Entertainment UK Ltd.
50 Presley Way, Crownhill, Milton
Keynes, MK8 0ES, Bucks, UK
support@LittleTikesStore.co.uk
Tel: +0 800 521 558

MGA Entertainment (Netherlands) B.V.
Baronie 68-70, 2404 XG
Alphen a/d Rijn, The Netherlands
www.mgae.de
info@mgae.de

**Imported by MGA Entertainment
Australia Pty Ltd**
Suite 2.02, 32 Delhi Road
Macquarie Park NSW 2113
1300 059 676